



TRU-LINE™

More than a Shower Drain




TRU-LINE™ by OASI®
Elegant, linear shower drains

Your very own

Oasis Retreat

"The day of breaking away from the boring bathroom has arrived. Spa-like comfort and beauty have become must-haves, instead of nice-to-haves. Bathrooms are now areas of retreat, an oasis, and... in the comfort of your very own home."

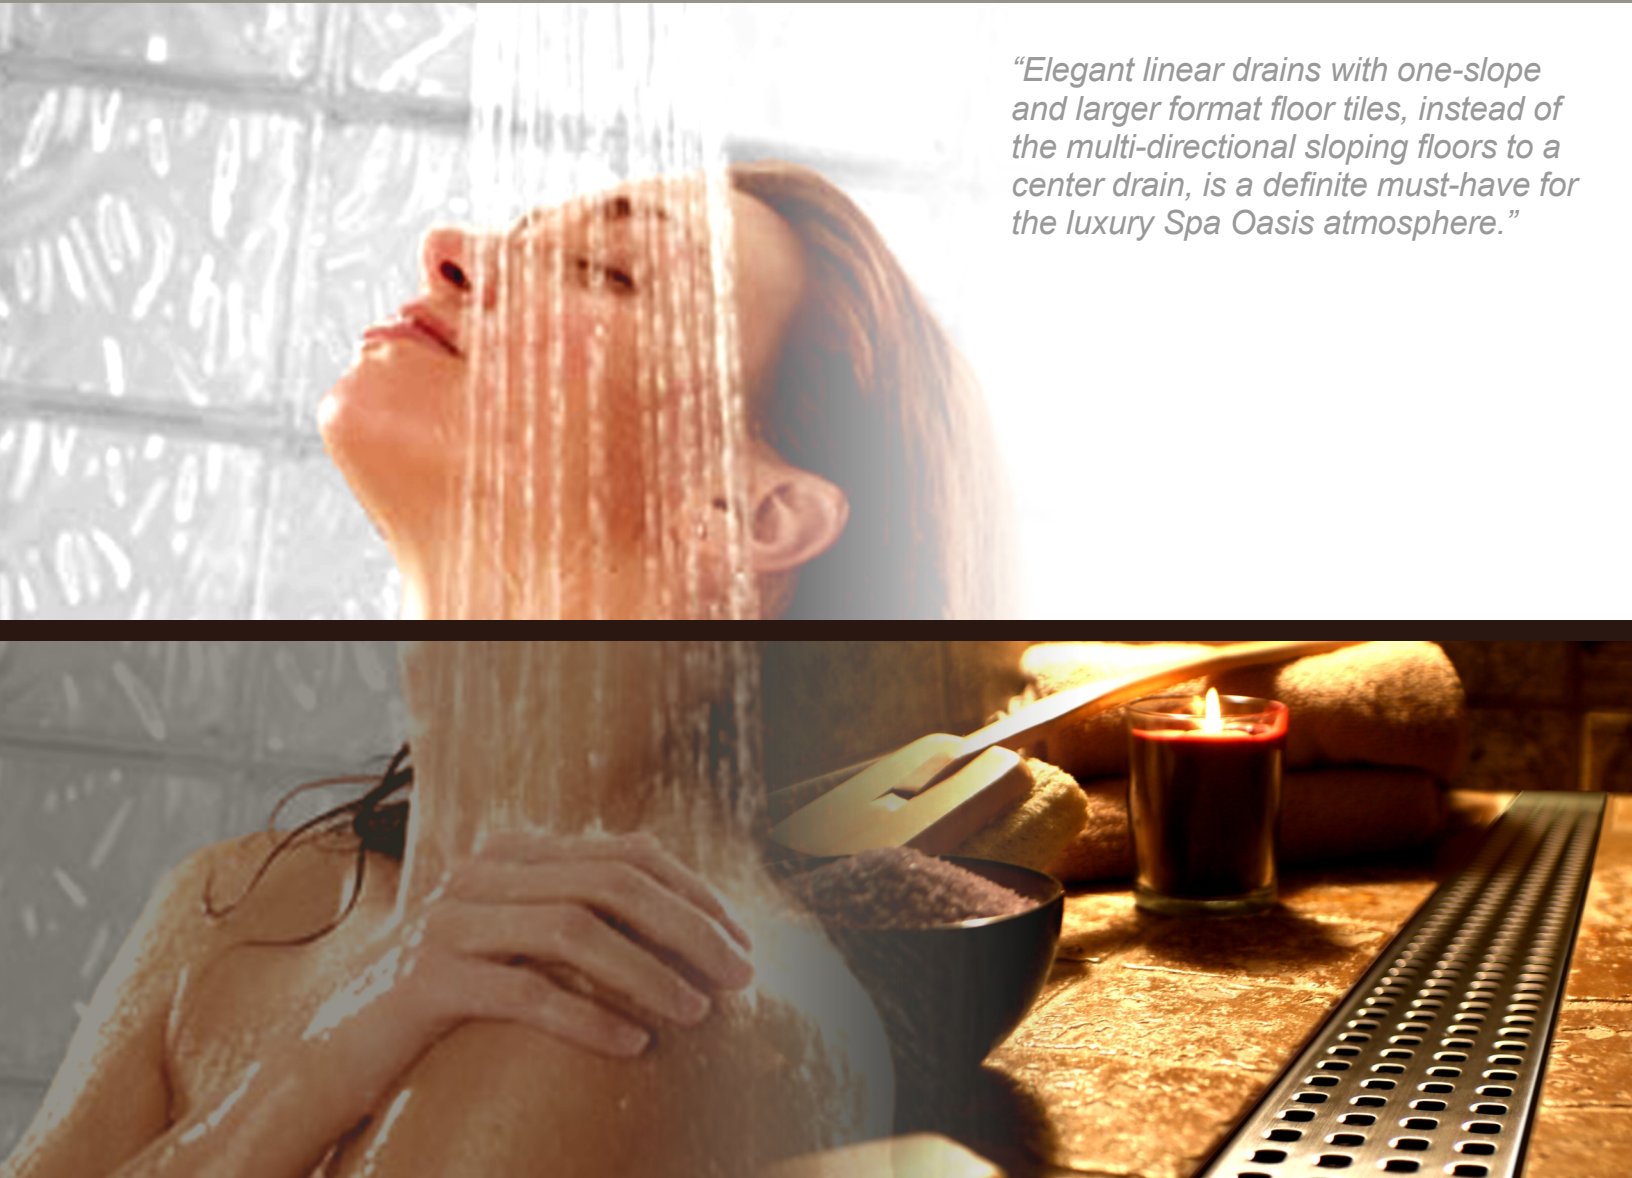

"Elegant linear drains with one-slope and larger format floor tiles, instead of the multi-directional sloping floors to a center drain, is a definite must-have for the luxury Spa Oasis atmosphere."

The at-home Oasis Escape Craze

With today's craving for at home spa-like retreats, linear drains give great flexibility in design as well as a luxurious elegance and pampered atmosphere that meets the extreme need to escape for some "me time" to unwind, from today's fast pace high demand world and recharge to meet another stressful day. The "craze" of transforming traditional task oriented bathroom into an escape oasis, often include barrier free entrances built-in seats, benches, and adequate inset niches. Linear drains allow for single-sloped floors and large sized floor tiles inside the shower that carry right into the main bathroom area, whereas historically shower floors have been sloped from all directions toward a central drain, limiting the floor tiles to mosaics or other relatively small-format tiles.

The Barrier-free Trend



Barrier-freeedom

Some of the primary reasons that linear drains are a hot trend in these spa-like retreats, is because of the open spa-like bathroom design. The craze for the single-sloped floor toward the linear drains eliminating the need for shower curbs, shower curtains and shower doors results in a barrier-free, more relaxing spa-like atmosphere.




Barrier-free generally means the shower entry has no shower curb, curtains, or glass door. With the popularity of steam showers and steam rooms however, the presence of a glass door to trap the steam is necessary. So, showers with no curb, still qualifies as barrier-free.

Barrier-free showers are not only for the up-to-date families, but have also become a must-have for today's elderly and aging baby boomer generation. The elderly have always craved for security, freedom of accessibility and mobility, especially when wheelchair accessibility is required.

Drain placement freedom

Placement of the OASI Truline linear shower drain is typically in one of three locations. Adjacent to an end wall, at the threshold of the shower doorway or somewhere in the middle of the shower, steam room or wet room floor.


Several drain placement options to choose from ensures versatility for technical needs as well as best placement for beauty and decor elegance.

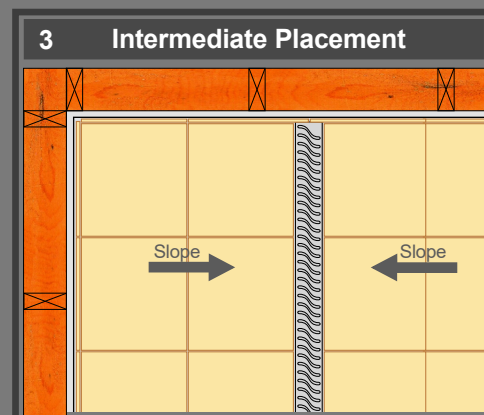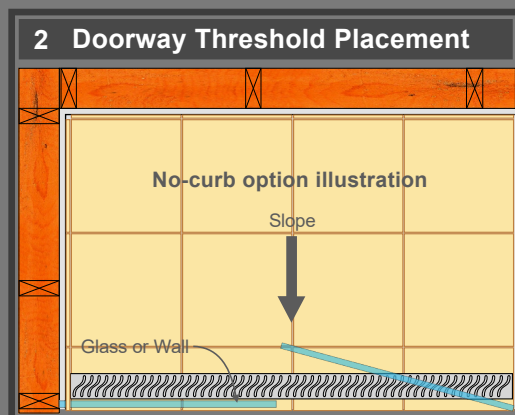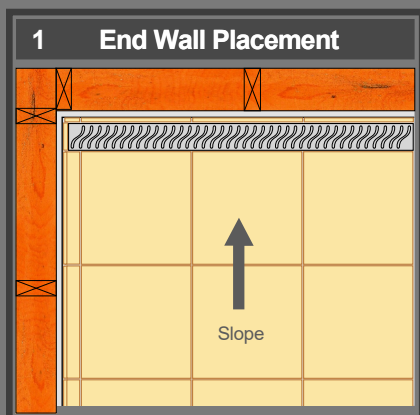


OASI® TRU-LINE

*3 Elegant Grate Styles
to Choose from!*




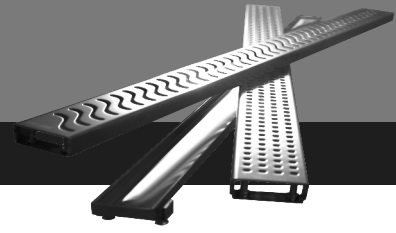


TRU-LINE LINEAR DRAIN - Layers Illustration for Wood Floor Installation

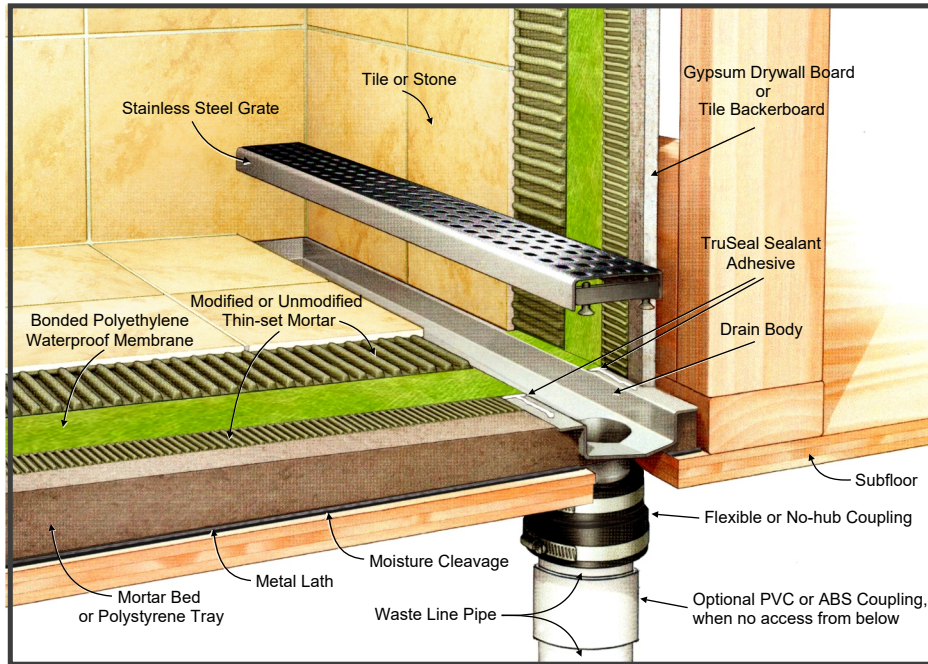


Layer View of Linear Drain Assembly Components

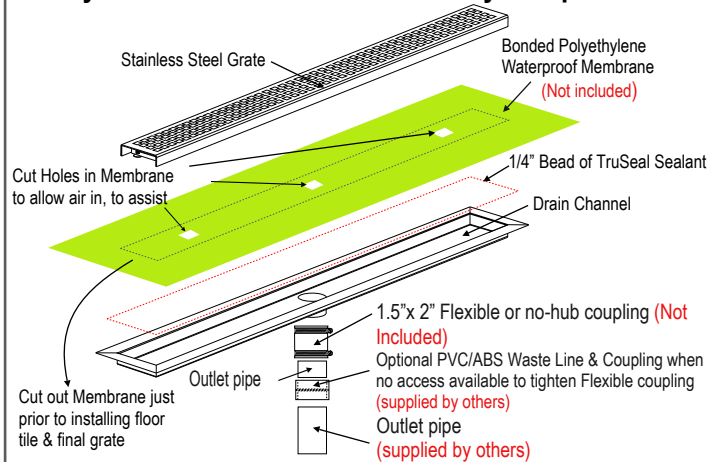

Wall Placement Detail

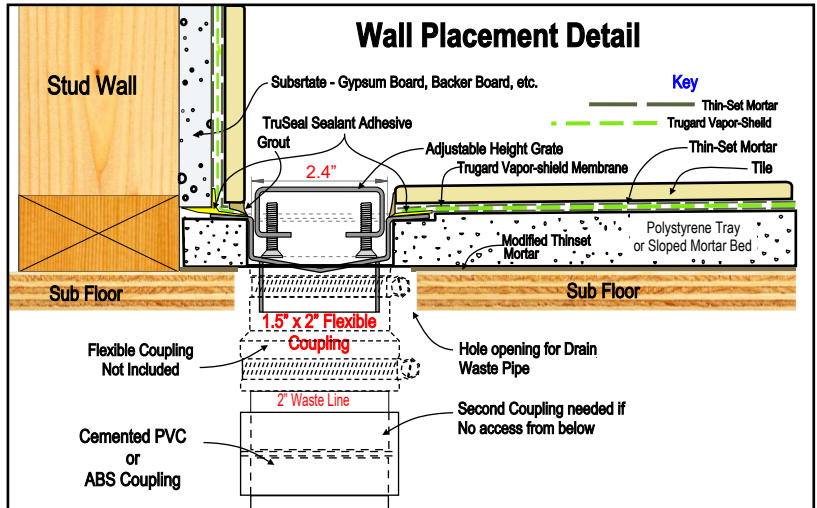

Standard Tray Detail

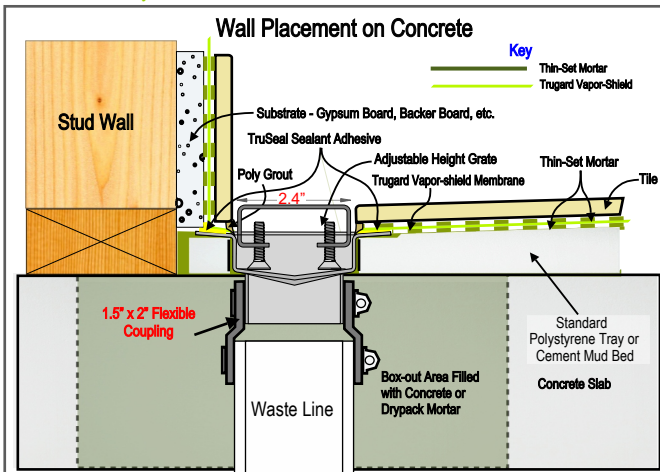

Intermediate Placement

